



Installation Instructions for Model:	All 600 Series, Oil Separators
---	---------------------------------------

1. Locate the separator in a warm, draft free area, or wrap separator with insulation.
2. Install the separator in a vertical position, close to the compressor, in between compressor and condenser, upstream (before) of any bypass piping.
3. Clamp and support separator and piping properly to minimize vibration potential.
4. Lines into and out of separator must be the same size diameter as separator connection size.
5. Charge the separator with the recommend amount of oil through the outlet connection before installing or starting the system.
6. Keep separator cool when brazing.
7. If oil separator is lower than the condenser, take precautions to keep liquid refrigerant out of separator.
8. Check oil level on new installations frequently.

Got a Question? Call us at 1-800-552-9300 or check out our website at www.temprite.com
