



INSTRUCTION SHEET

CRH-660 CONDENSATE EVAPORATOR

INSTALLATION INSTRUCTIONS & MAINTENANCE RECOMMENDATIONS

IMPORTANT

Condensate evaporators are incomplete in construction features. They are intended solely as factory-installed components of other equipment. It is the responsibility of the original equipment manufacturer to provide safeguards in the location and electrical connections for all condensate evaporator applications.

The CRH-660 Condensate Evaporator has a capacity of 1479ml.

ASSEMBLY AND PLACEMENT ON A HORIZONTAL SURFACE

1. Attach the enclosed springs onto the evaporator legs by pressing the small end of the spring on to the leg while twisting.
2. Position the evaporator in a well ventilated area to allow the moisture laden air to be carried off.
3. Do not operate the evaporator on any wet surface.
4. Do not place the evaporator on any wood surface or near any flammable materials.
5. Do not allow power cord to contact hot outside surface of pan.

WIRING

6. The evaporator is marked with its voltage rating. Use a separate electrical line connected to a fuse block or circuit breaker of proper capacity to assure full voltage. Voltage drops will decrease operating performance and voltage surges may damage unit.
7. All units must be grounded. Connect green centre conductor to ground.
8. Ensure cord is cut to the appropriate length, **do not coil the cord as this could cause overheating of the wires.**

MAINTENANCE

9. Do not remove the enclosure cover or tamper with any components.
10. Clean the pan regularly for maximum performance. Clean by brushing out loose residue with a stiff brush.

NOTE

The installer of this unit must provide the refrigeration equipment operator with any applicable instructions and warnings for its use, as installed in the equipment.