
# HTC SERIES III





# HTC-5

## 2 Heat & 2 Cool TEMPERATURE CONTROLLER with LED ROOM TEMPERATURE DISPLAY

The HTC-5 temperature controller is primarily designed for the control of 2 Stage Heat and 2 Stage Cool Air-conditioning units. All output relays are voltage free, permitting use on either 240 V or 24 Volt circuitry. Stage switch on points are adjustable with their ON/OFF status displayed via LED indicators.

The HTC-5 also incorporates a random time delay on the fan relay output enabling multiple A/C Unit startups using only one Time Clock or System Start Switch.

## Features

Australian made and designed.
Power Supply can be either 24v or 240v A.C  ®
10 AMP (resistive) Voltage free relay contacts.
Large LED Temperature Display with 0.1 Degree Increments.
Upgradeable via Plug in Auxiliary Cards. (Many options available.)
Random time delay for Fan Relay Start.
DIP Switch configurable for HEAT/COOL or COMP/RV type wiring.
Wide compatibility to all packaged AC units and Heat Pumps.

HTC5.P1.08052008

#### **HEAD OFFICE:**

Unit 7, 54 Howleys Road, Notting Hill, Vic. 3168 Phone: (03) 9562 7888 Fax: (03) 9562 7835 Web Site Address

#### www.hevac.com.au

Email Contacts
SALES: sales@hevac.com.au
TECHNICAL: technical@hevac.com.au

# HTC-5 Technical Specifications and Terminal Designations HEVAC CONTROLS

Power supply requirements	24VAC or 240VAC
Power consumption on 240 volts	7 VA
Power consumption on 24 volts	I VA
Sensor Input	NTC 4000 Ohms at 25 Degrees Centigrade
Relay outputs	240VAC 10 amp resistive or 3 amp inductive
Temperature range (Factory Set to 22oC)	16 to 28 Degrees Centigrade
Switching differential for STAGE 1 (Switching Span)	0.3 Degrees Centigrade (NON-Adjustable)
Switching differential for STAGE 2	0.7 Degrees Centigrade (NON-Adjustable)
Stage dead zone adjustment range	0.5 to 2.5 Degrees Celsius per Stage
Stage dead zone (Factory Settings)	1.0 oC per Stage
Relay Output indication	Green LED for Cooling (2 Off) Red LED for Heating (2 Off)
Room temperature LED Indication	10mm High RED 3 digit 7 segment display
Room temperature LED Display Resolution	0.1 Degrees Centigrade Increments
Plug in Auxiliary Card Options	Refer to data sheet HAX53 for specific details
Dip Switch Configurations (Factory Default)	Dip Switch 1 & 2 set to YES = Controller is configured for HEAT/COOL wiring.  Dip Switch 3 set to NO = Remote Set point Feature is turned OFF
Dip Switch Configurations for COMPRESSOR/RV	Dip Switch 1 & 2 set to NO = Controller is configured for COMPRESSOR/RV wiring
Dip Switch Configurations for REMOTE SETPOINT	Dip Switch 3 set to YES = Remote Set point Feature is turned ON
Fan Relay random time delay (Factory Preset)	1 to 5 seconds (Not user adjustable)
Mounting method	35mm DIN rail (Not supplied)


# **Terminal Designations**

G	24 VOLT AC SUPPLY ACTIVE	3	HEATING STAGE 1 OUTPUT <i>OR</i> R/V FOR HEAT
Go	24 VOLT AC SUPPLY GROUND REFERENCE	4	(HEATING STAGE 1 & R/V FOR COOL) COMMON
В	SENSOR INPUT	5	REVERSING VALVE FOR COOLING OUTPUT
M	SENSOR INPUT COMMON	6	COOLING STAGE 1 OUTPUT
R	REMOTE SET POINT SHIFT	7	(COOLING STAGE 1 & 2 & R/V FOR HEAT) COMMON
Y	Y SIGNAL OUTPUT	8	REVERSING VALVE FOR HEATING OUTPUT
A	240 VOLT AC SUPPLY (ACTIVE)	9	COOLING STAGE 2 OUTPUT
N	240 VOLT AC SUPPLY (NEUTRAL)	10	FAN RELAY <b>OR</b> AUXILIARY CARD NORMALLY OPEN
1	HEAT STAGE 2 COMMON	11	FAN RELAY OR AUXILIARY CARD COMMON
2	HEATING STAGE 2 OUTPUT	12	FAN RELAY <i>OR</i> AUXILIARY CARD NORMALLY CLOSED


HTC5.P2.08052008

**HEAD OFFICE:** Unit 7, 54 Howleys Road, Notting Hill, Victoria. 3168 Phone: (03) 9562 7888 Fax: (03) 9562 7835

### Heat/Cool Type A/C Units utilizing the Internal Fan Relay

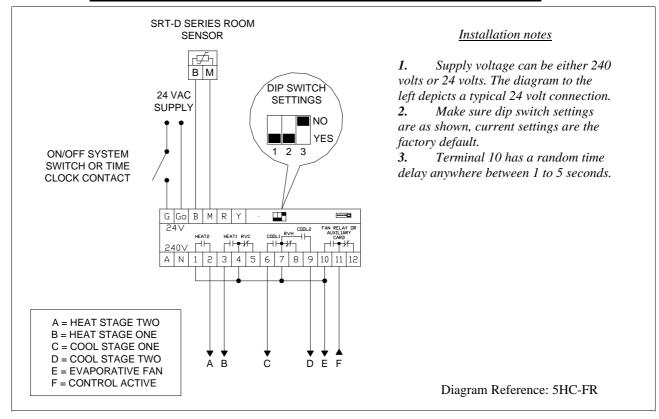


### Compressor Reversing Valve Type A/C Units utilizing the Internal Fan Relay

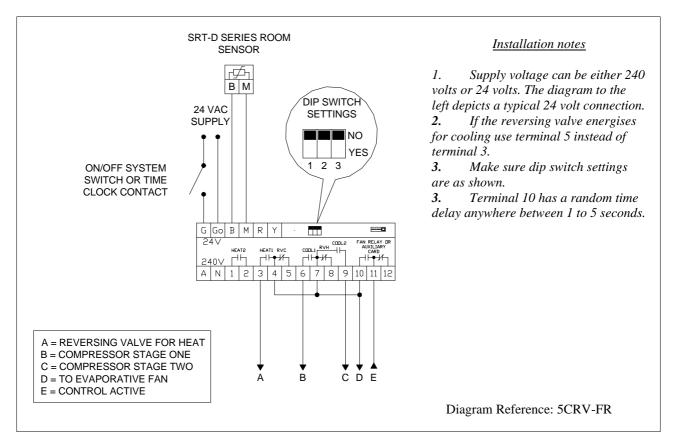


HTC5.P3.08052008

### Heat/Cool Type A/C Units without using Internal Fan Relay

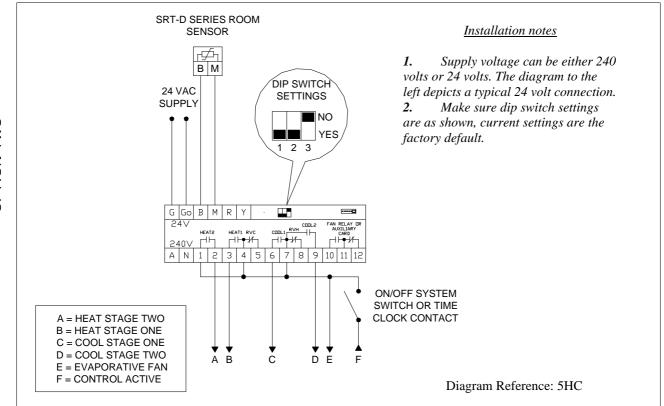


### Compressor Reversing Valve Type A/C Units without using the Internal Fan Relay

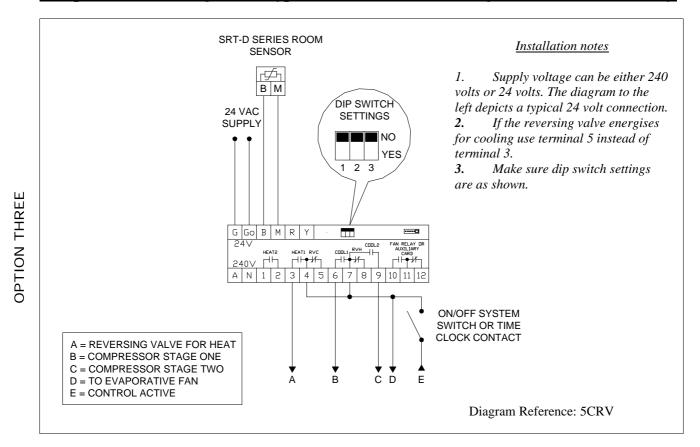

HTC5.P4.08052008

### Connecting a sensor with a Remote Set point Shift

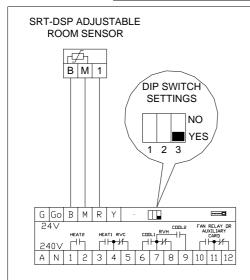


#### Installation notes

- 1. DIP SWITCH 3 must be set to YES.
- 2. The remaining DIP SWITCH Settings do not need to be altered.
- 3. The controller set point must be set to 22 Degrees.

Diagram Reference: RSP


# Connecting a Plug in Auxiliary Card

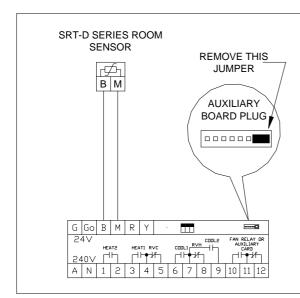


#### Installation notes

- 1. Remove power from the controller before connecting the Auxiliary Card.
- 2. Remove the shorting jumper as shown in the diagram.
- 3. Plug in the new Auxiliary card and secure with the screw provided.
- **4.** Follow the Instructions provided with the Auxiliary Card for further information.
- 5. When using an ON/OFF type Auxiliary Card the fan relay output Terminals 10,11 & 12 are now used by the Card.

### **Dimensional Drawings**

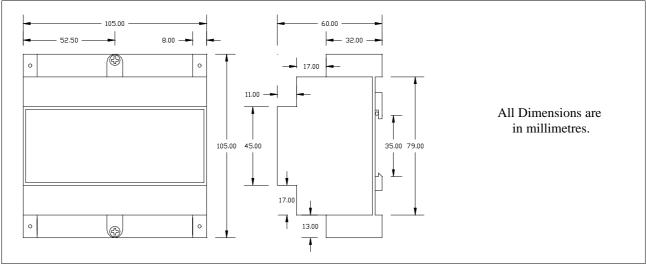

HTC5.P5.08052008

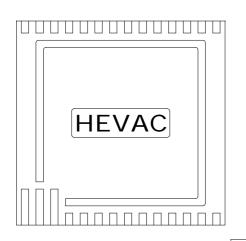

The **SRT-D** is a wall mount room temperature sensor and is suitable for use with all the **DIGITAL HTC** series range of temperature controllers. The sensor is non-adjustable, setpoint changes can only be made back at the **HTC** Controller.

Constructed from high impact ABS plastic, the housing is specifically designed with sensor sensitivity in mind making the **SRT-D** very responsive even in low airflow situations.

Cable entry is available from the rear with side entry knockouts for cable duct on three sides.

### **Technical Specifications**

Control range 8 to 33 Degrees Centigrade

Time constant 3 Minutes

Thermistor characteristics NTC 4000 ohms at 25 Degrees Centigrade


Wiring Considerations Screened cable is recommended, earthed at

the controller end only

Housing Colour Cream

Enclosure IP 31

*Measuring Accuracy* +/- 0.3 Degrees Centigrade

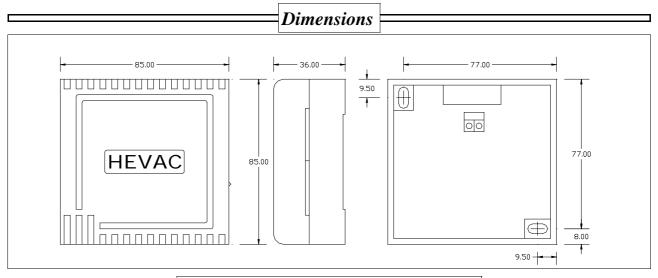

# Thermistor Resistance Characteristics

Temp	Ohms										
10.00	5454	14.00	4970	18.00	4565	22.00	4222	26.00	3932	30.00	3684
11.00	5324	15.00	4862	19.00	4474	23.00	4145	27.00	3866	31.00	3628
12.00	5201	16.00	4759	20.00	4387	24.00	4071	28.00	3803	32.00	3574
13.00	5083	17.00	4660	21.00	4303	25.00	4000	29.00	3742	33.00	3522

HTC5.P6.08052008

# **Other HEVAC Quality Products**

#### **HEVAC CONTROLS**

#### **SENSORS**

- AVERAGING ROOM SENSORS
- DUCT SENSORS
- PIPE SENSORS
- ROOM SENSORS WITH LCD DISPLAY
- REMOTE SETPOINT ADJUSTERS
- ROOM SENSORS WITH VARIOUS SWITCH FUNCTIONS

### HTC ANALOGUE CONTROLLERS with the following features

- DUAL SUPPLY VOLTAGE 24 VOLT OR 240 VOLTS AC
- 0 –10 VDC ECONOMY CYCLE OUTPUTS
- COMPARATORS EITHER ON/OFF OR MODULATING
- 0-10 VDC MODULATING CHILL WATER & HOT WATER OUTPUTS
- AUXILIARY ELECTRIC ELEMENT STAGES
- TRIPLE COMPRESSOR HEAT PUMP MODELS
- ON/OFF ECONOMY CYCLE OUTPUTS

### RTC ELECTRONIC ROOM THERMOSTATS with the following features

- DUAL SUPPLY VOLTAGE 24 VOLT OR 240 VOLTS AC
- 5 AMP (Resistive) POTENTIAL FREE RELAY CONTACTS
- L.E.D INDICATION OF ALL OUTPUTS
- CONCEALLED OR EXPOSED SETPOINT ADJUSTMENT

### HHC HUMIDITY CONTROLLER with the following features

- 0 –10 VDC HUMIDIFICATION OUTPUT
- 0 –10 VDC DE-HUMIDIFICATION OUTPUT
- ON/OFF HUMIDIFICATION OUTPUT
- ON/OFF DE- HUMIDIFICATION OUTPUT
- DC POWER SUPPLY FOR HUMIDITY SENSOR

### HDT-6 MULTISTAGE DELAY ON TIMER with the following features

- DUAL SUPPLY VOLTAGE 24 VOLT OR 240 VOLT
- SEVEN USER ADJUSTABLE DELAY SETTINGS
- TEST FACILITY

PROD.P1.06052008

### LT-SERIES LAMP TEST MODULES

IF YOU HAVE A SPECIFIC REQUIREMENT OR REQUIRE FURTHER TECHNICAL ASSISTANCE PLEASE CONTACT OUR FRIENDLY SALES STAFF.

Phone: (03) 9562-7888 Fax: (03) 9562-7835 Email: sales@hevac.com.au Web: www.hevac.com.au

## **HEVAC CONTROLS**

NOTES:	