

CONDENSER GUARDS

MAXIMUM STRENGTH

Made of Heavy Duty Angle Iron & 25mm steel mesh and hot dipped galvanised to last.

MAXIMUM SECURITY

Can be bolted to a wall or fastened to a concrete pad. The front access panel can be padlocked for maximum security.

MAXIMUM STANDARDS

PROTECT Guards comply to Government Specifications.




ProTect condenser guards are built from 40mm x 40mm x 40mm x 3mm hot rolled mild steel and 25mm steel mesh 3.15mm wire. The guard is hot dipped galvanised in Australia and complies to AS/NZS 2312.2 and AS/NZS 4680. Further information relating to these standards and performance in various environments can be found at the Galvanizers Association of Australia's website www.gaa.com.au ProTect condenser guards are warranted for a period of 1 year from date of purchase and are limited to repair, replacement or credit if in our opinion the condenser guard is defective due to workmanship or materials. Terms and Conditions can be found on our website www.aspenpumps.com.au

CONDENSER GUARDS

PART NO.	DIMENSIONS
ACG9	W1000 x H900 x D600mm
ACG10	W1200 x H1000 x D600mm
ACG12	W1200 x H1200 x D600mm
ACG14	W1200 x H1400 x D600mm
ACG16	W1200 x H1600 x D600mm
ACG20	W1400 x H2000 x D900mm
ACG14 ACG16	W1200 x H1400 x D600mm W1200 x H1600 x D600mm

*Back panels are available and sold separately

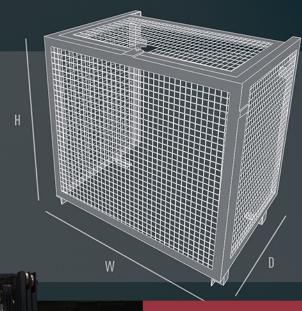

QUICK AND EASY INSTALLATION






EASY TO HANDLE. EASY TO STORE.



Stand RIGHT SIDE PANEL of the guard on its edge with wall mount plate facing up


Take TOP PANEL making sure the 'lock' area in the top panel faces the ground

Bring the TOP PANEL in from a 45° angle whilst lining up the hook with the locating slot of the side panel

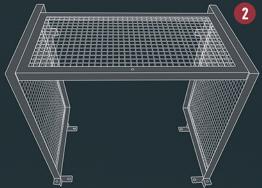


Repeat Step 1 for the LEFT SIDE PANEL and stand up as shown

Fit the guard around the air conditioning unit

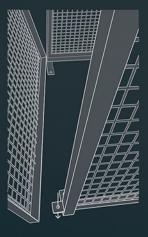

Once you have fitted the guard around the air conditioning unit; place the FRONT PANEL onto assembled guard by locating the mounting pins on the bottom of the panel into the holes on each side of the guard

NOTE: Make sure the FRONT PANEL fits correctly before you fasten the guard to the wall or ground

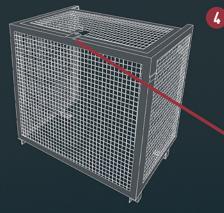

Once you have completed
Step 3 you can fasten the
guard to the wall or ground
and lock the FRONT PANEL
in to place with a padlock
or bolt (provided)



