


BEAUTIFUL TRUNKING

SD


SLIMDUCT SD

Material...P.V.C. (Ivory/White/Gray/Brown/Black)

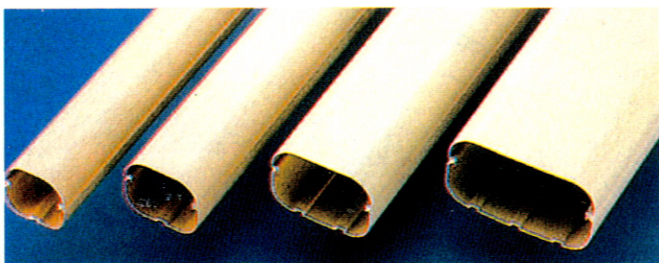


Code No.	Product No.	A	B	C	D	E	Pcs/Pkg
0401	SD-66	60	58	46.5	64	51	15
0402	SD-77	75	63	60	76	56	15
0403	SD-100	100	70	86	98	63	10
0404	SD-140	140	80	122	135	73	5

Dimension

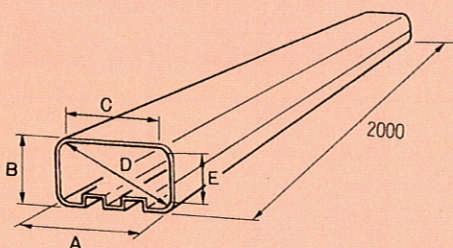


(Unit : mm)

Dimension of Screw Holes.

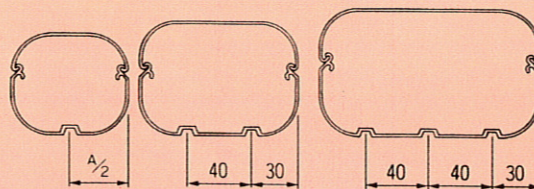

Screw holes are provided at 100mm pitch. (unit : mm)  
Screw holes can easily be punched out with a screw driver.

(Unit : mm)

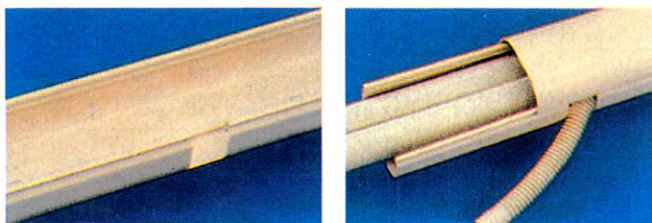

If drain hose has to be taken out from Slimduct, cut the rib of slimduct to the cut line (two section) with saw and take out the rib.

Remarks


- ※ Slimduct SD is not water proof.
- ※ Please use Slimduct and the accessories under the environment where the surface temperature shall be in the range of -20°C ~ +60°C.
- ※ Please refer containable pipe capacity and specification to page No.9

WALL INLET/OUTLET

SW

WALL CORNER


Material...P.V.C.

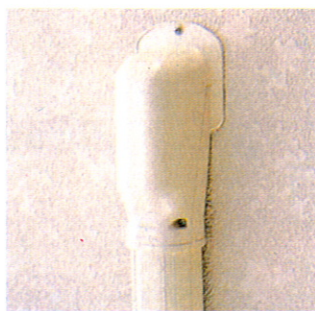

Code No.	Product No.	A	B	C	D	E	Pcs/Pkg
0411	SW-66	68	62	90	195	77	60(20)
0412	SW-77	83	66	110	205	77	60(20)
0413	SW-100	110	74	128	223	86	10(10)
0414	SW-140	146	84	166	295	98	5( 5)


※ ( ) shows black, gray, brown and white color

Dimension

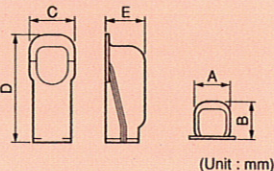

(Unit : mm)

Installation Dimension

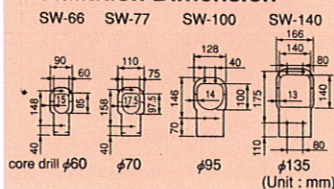

(Unit : mm)

ANNOUNCEMENT OF SLIMDUCT SD MODIFICATION


No worry for slide down Cover!!

To protect Slimduct cover from Sliding down in vertical installation, Slimduct SD and Wall Corner SW was modified.

DETAILS OF MODIFICATION

◆On Slimduct SD Body

- Knock out hole is provided at the both ends of duct cover.
  - ※ Knock out hole is punched out, then the punched out piece from Slimduct is put again in the original position.
- Half round shaped pin is provided inside Wall Corner.

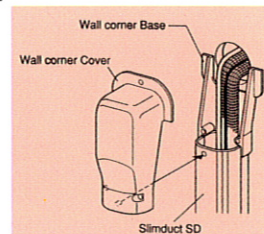

INSTALLATION METHOD

1. Set the bottom plate of Slimduct SD and Wall Corner at Wall Through Penetration and lay pipes.
2. Punch out knock out hole of Slimduct cover with a screw driver.
3. Set Slimduct SD cover on the bottom plate.
4. Make sure to put the half round shaped pin of Wall Corner SW into knock out hole of slimduct and fix them with screws.
5. Apply caulking process to prevent rain water from coming inside Slimduct.

(Remarks)

- ※ If knock out hole is not provided on the cover, please take out the pin of the Wall Corner Cover with a nipper etc. However, this shall not be effective for the cover slide down.
- ※ There is no effective measure except Wall Corner, Slim Corner and Slim Joint (except 140 type) for the cover slide down. Please use End Cover or Slim Joint in such case as before.
- ※ Knock out hole shall be concealed with the most of Slimduct jointing accessories when the duct is set deeply at interlocked position, but knock out hole shall be exposed when Slimduct length adjustment at interlocked margin is made. Interlocked margin of the following accessories are short and the knock out hole, if the hole is punched out, shall be exposed. In such case, please use Slimduct without punching out the hole or cut Slimduct.

■ Short Interlocked Margin : SKM, SKF, SCM, SCF, SFJ, SDR (except SDR-140-100)